




# Black and Decker JS660 Blade Holder Replacement

Written By: matt murray

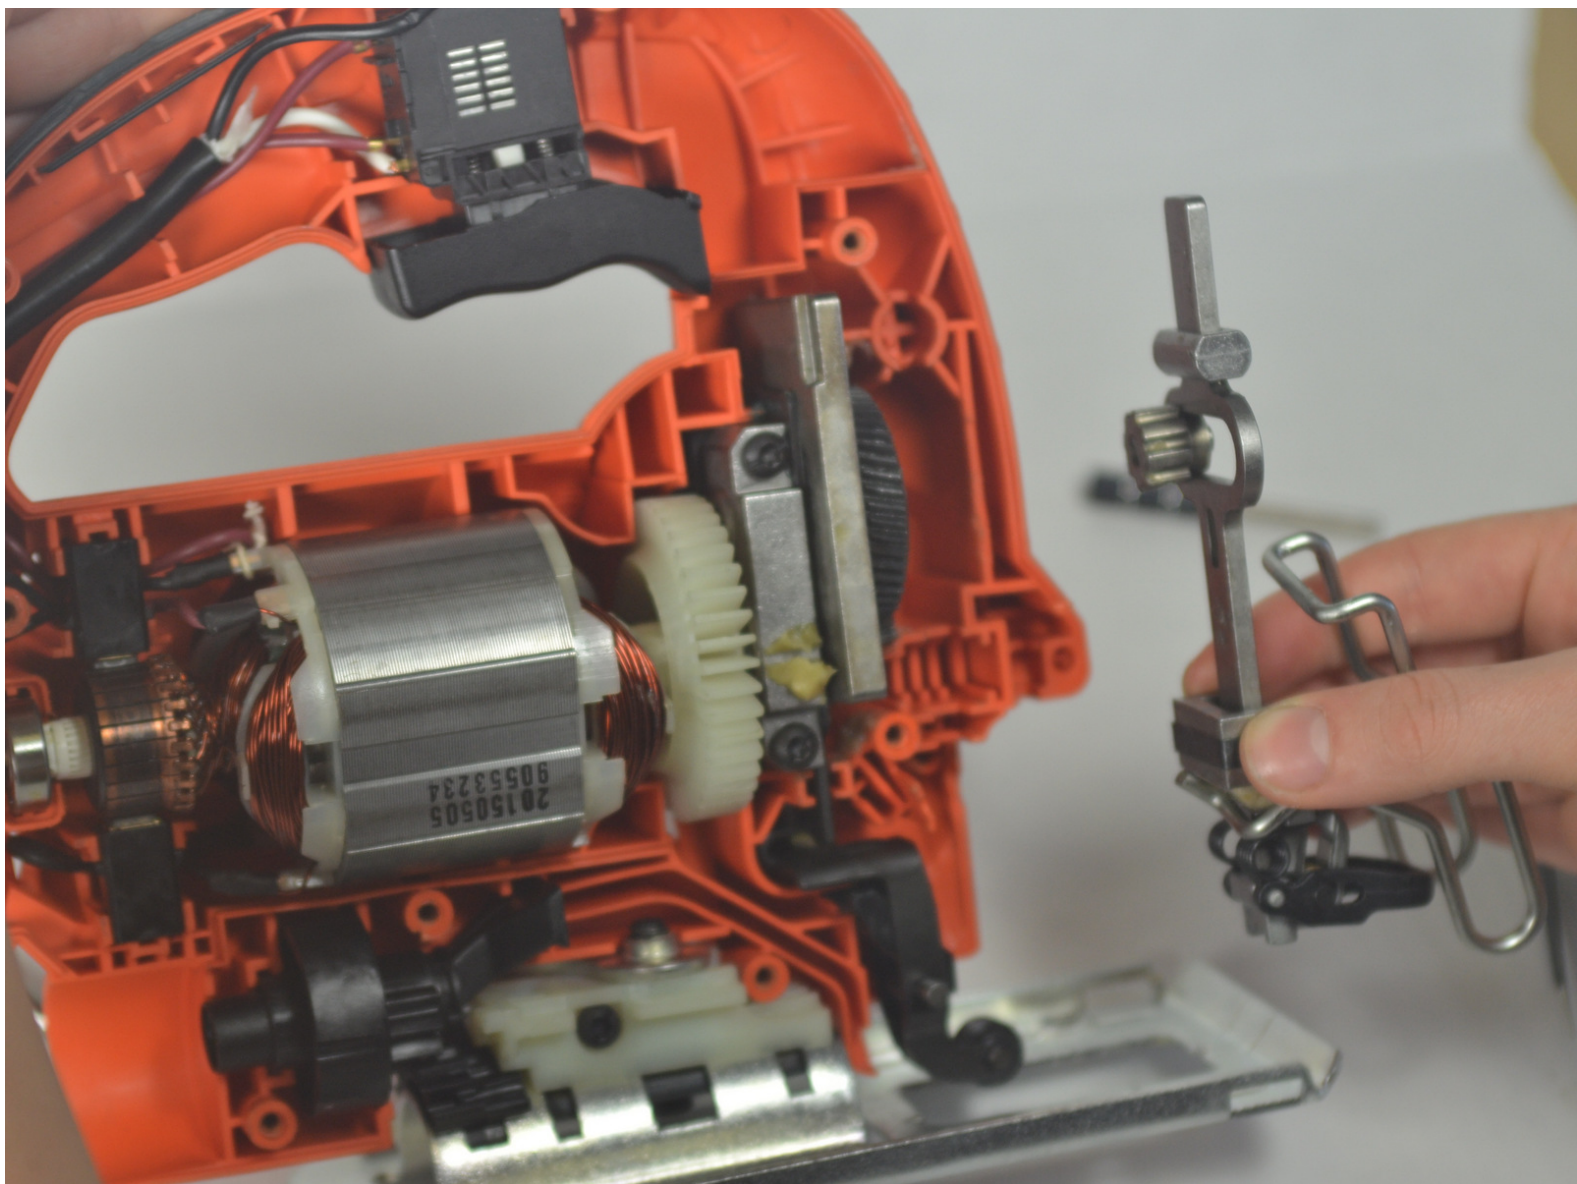

## INTRODUCTION

This guide will show you how to remove the entire blade holder assembly if it were to ever get broken.



### TOOLS:

- [T15 Torx Screwdriver](#) (1)



### PARTS:


- [Blade Holder](#) (1)

## Step 1 — Housing Disassembly



- Remove the nine torx 15.875mm screws on the front of the jigsaw using a T-15 torx screwdriver.


## Step 2

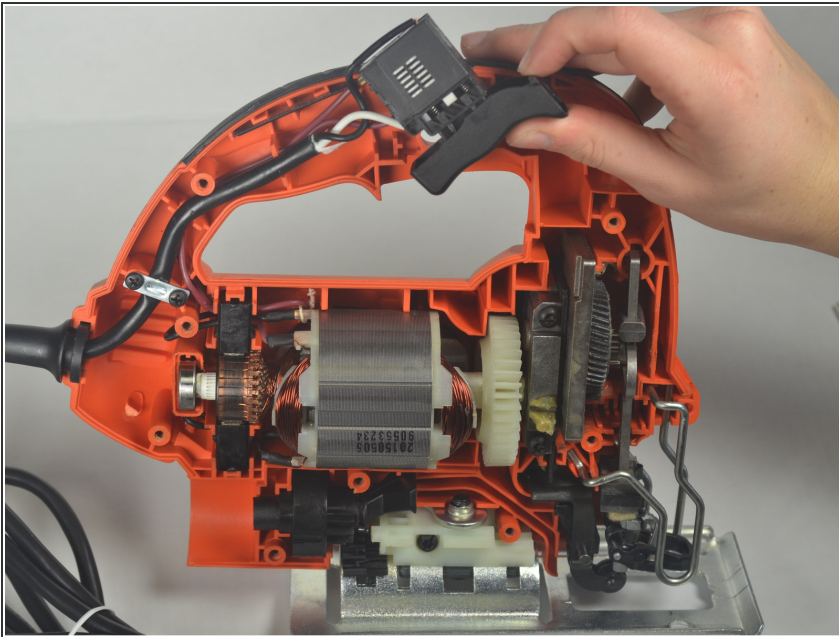

- By separating the two housing halves, carefully remove the top plate.



## Step 3 — Blade Holder

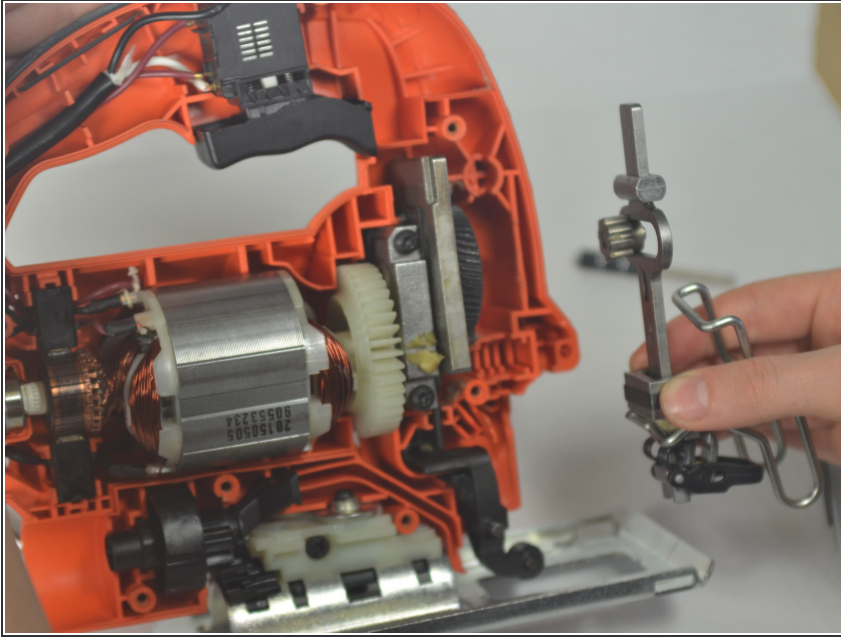

- Being careful to keep all parts together, grab the entire assembly and pull it directly out of the saw.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 08:54:24 PM.